

# Bluetooth Serial Adapter User Manuals

Chongqing JINO Science & Technology Development Co.,Ltd

Ver1.0\_20140125

## CONTENTS

1. Brief Introduction.....	2
2. Technical Specifications.....	3
4. Description of indicator and press-button.....	5
5. Definition of DB9 Socket Pin.....	7
6. Description of Power Supply Condition.....	7
7. Description of Serial Interconnection.....	8
8. Instructions.....	9
9. Configuration Tools.....	11
9.1 Boot screen.....	12
9.2 Basic Settings.....	12
9.3 Serial parameters.....	13
9.4 Energy-saving parameters and commands.....	14
9.5 Set.....	15
10. AT command.....	15
1 Test command.....	16
2 Set / Inquire the baud rate.....	16
3. Set / Inquire the serial communication mode.....	16
4. Set / Inquire Serial Response time.....	17
5. Set / Inquire authentication password.....	17
6.Set/Inquire Name.....	17
7. Set / Inquire Sniff power-saving mode.....	18
8 Set / Inquire the parameters of Inquiring scan and connecting scan.....	18
9 Set / Inquire whether authenticate.....	19
10 Set / Inquire the type of the device.....	19
11. FAQ:.....	24
1 After powering the module, the indicator of the Module doesn't blink.....	24
2 When there are multiple Bluetooth devices around, how to connect to the specified Bluetooth device?.....	25
3 How to operate if want to connect with multiply devices at the same time?.....	25
4 How the multipoint connections send and receive data? And what are the differences between the sending & receiving of multipoint and point-to-point connections?.....	25
5 Can not set the parameters, or use the Configuration Tools displaying "connection timeout" when connects to the PC.....	26
6 How to send AT command by your hand?.....	26
7 Two serial adapter can not connect with each other.....	26
8 Why PC, USB Dongle can not find the serial adapter?.....	27
9 Why PC USB Dongle and serial adapter can not realize data communication or only communicate by one-way data communication?.....	27
10 How to communicate with PDA?.....	27
11 How to communicate with Bluetooth mobile phone?.....	28
12. Used together with WIFI equipment.....	28
12. Appendix.....	28

12.1 Equipment Type Number .....	28
12.2 MAJOR SERVICE CLASSES .....	29
12.3 MAJOR DEVICE CLASSES .....	29
12.4 THE MINOR DEVICE CLASS FIELD .....	30
12.5 MINOR DEVICE CLASS FIELD - COMPUTER MAJOR CLASS .....	30
12.6 MINOR DEVICE CLASS FIELD - PHONE MAJOR CLASS .....	31
12.7 MINOR DEVICE CLASS FIELD - LAN/NETWORK ACCESS POINT MAJOR CLASS .....	31
12.8 MINOR DEVICE CLASS FIELD - AUDIO/VIDEO MAJOR CLASS .....	32
12.9 MINOR DEVICE CLASS FIELD - PERIPHERAL MAJOR CLASS .....	33
12.10 MINOR DEVICE CLASS FIELD - IMAGING MAJOR CLASS .....	33

## 1. Brief Introduction


Bluetooth RS232 adapter can be applied to all kinds of home appliances, equipment (such as medical treatment equipment) and other electronic information products. As a cable replacement program, it can connect the single-chip processor or processor directly via using PnP mode to achieve the wireless data transmission among equipments transparently. Bluetooth RS232 adapter can be divided into Master device and Slave device which can be matched as one set. When the circuit of the Bluetooth RS232 adapter hardware is connected correctly and powered up, the master and slave device will establish a connection automatically and identify & memory each other. Then, the user's device can use the Bluetooth RS232 adapter as the same as using a serial cable.

Bluetooth RS232 adapter can be used independently as well, excluding using by match. When user's equipment equipped with a Slave Bluetooth RS232 adapter, other Bluetooth devices, such as Bluetooth PDA can search out this Bluetooth RS232 adapter and find out the services provided, and then establish connection and communicate with it through these services. For the communication of the users' equipments, Bluetooth RS232 adapter can still be used as serial line.

Bluetooth RS232 adapter provides a safety identification function. When users use safety identification, the equipments' connects must be authenticated, and only the authenticated equipment can realize communication. However, this process could be finished automatically if it is a pair of Bluetooth RS232 adapter. (Default Password: 1234)

Figure 1 shows that in the application of user devices A and B is a serial cable. Figure 2 shows that in the application of the user devices A and B are Bluetooth RS232 adapter, and between the two devices, it is the same to users devices and regarded as a serial line. Figure 3 shows the connection of Bluetooth RS232 adapter and other Bluetooth devices (here is the connection situation of the Bluetooth PDA). Under this situation, for the user device, it is the same as the figure 1 and figure 2.

Figure1

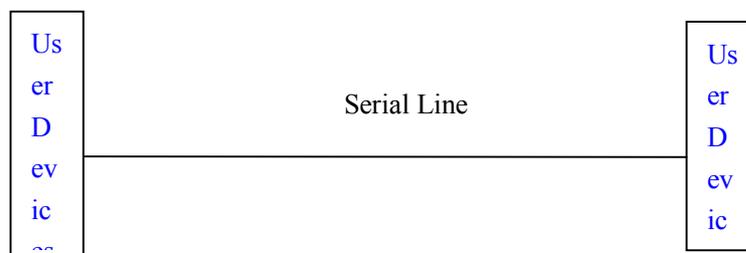

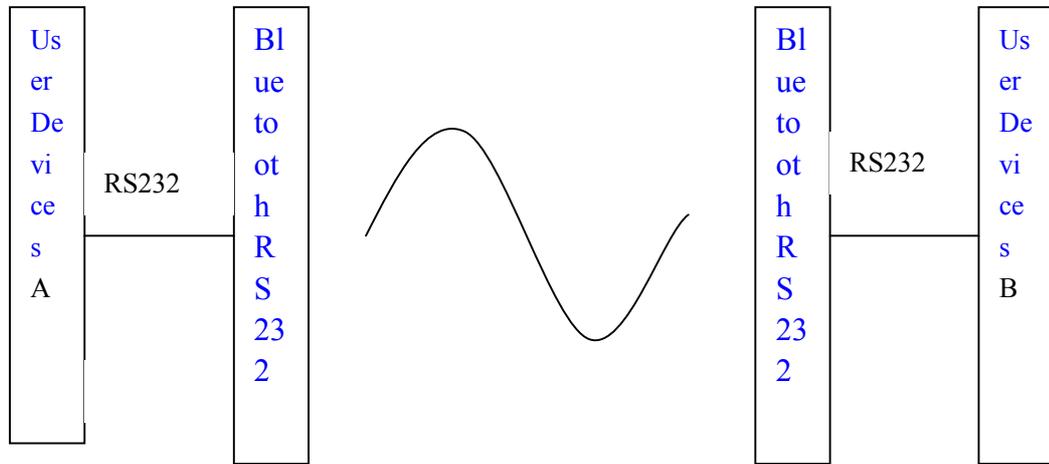


Figure 2

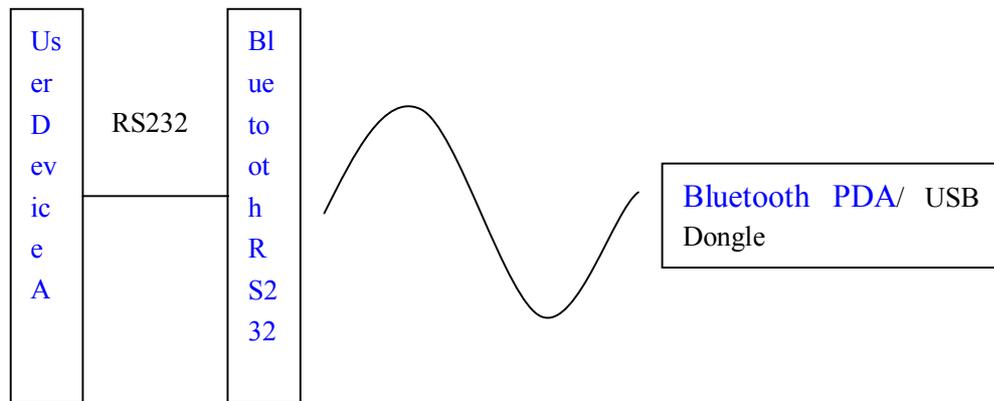


Figure 3

## 2. Technical Specifications

Standard and Type	Bluetooth Serial Adapter				
	Standard	Class 1 (Hole pattern)	CLASS 1 (Needle pattern)	Class 2 (Hole pattern)	CLASS 2 (Needle pattern)

	Type	BTS3804C1 H	BTS4504C1 H	BTS3904C2 P	BTS4004C2 P
Specification	Compatible Bluetooth 2.0 Specification				
RF output power	100M	CLASS 1 Standard			
	10M	CLASS 2 Standard			
Operating Frequency	ISM Frequency 2.400~2.483MHz				
Spectrum extensions	FHSS				
Antenna	100M	Outlay antenna			
	10M	Built-in antenna			
Sensitivity	<-88dBm at < 0.1% BER				
protocol	LM、LC、L2cap、SDP、RFCOMM				
Support services	Bluetooth serial protocol (Bluetooth Serial Port Profile)				
Maximum connection number	As master devices, it can connect 7 slave devices at the same time at most.				
Power	Plug power supply and DB9 seat power supply, 5 ~ 9V 100mA rated current				
Communication Interface	Standard RS232 five-wire serial mode (RxD, TxD, RTS, CTS, GND)				
Connector	DB9 socket (needle pattern or hole pattern)				
Signal pin	RxD, TxD, RTS, CTS, GND				
energy-saving	Automatic power saving mode, support low-power operating mode / high-speed operating mode				
Security	Security certification, data encryption				
Baud rate	1.2K~1382.4Kbps, if it needed, it may up to 3Mbps				
LED indicator	Power indicating, connection status, operating mode				
Applied range	PC、MCU、PDA、mobile phone and so on				
Maximum connection distance	100M	Open field 100 meters			
	10M	Open field 10 meters			
Work Environment	Working Temperature	0°C ~ +60°C			
	Storage Temperature	-10°C ~ +70°C			
	Humidity	5% ~ 90% no condensation			
Size of shell	99 (L) × 34 (W) × 17 (H) without antenna				

### 3. Power Consumption

Mode	Test Condition (Slave Device)	Specification	Maximum mA	Typical Value mA	Minimum mA
Working	Sniff Open (No data transmission)	100M	24.2	15.5	15.3
		10M	15.9	11.2	10.9
	Sniff close or data transmission	100M	42.4	33.0	29.4
		10M	26.9	22.5	21.1
No connection	Connect (Inquiry) interval=2048	100M	27.0	15.4	15.3
	Connect (Inquiry) continue=18	10M	21.4	11.2	10.0

Notes:

Under regular mode, all parameter is default.

Between the devices it is 10 meters apart. It continuously sends data at the same time with 9600 baud rate.

### 4. Description of indicator and press-button

There are three LED light on the RS232 adapter used to indicate the power state, connect status and master/slave mode of RS232 adapter. Using mode switchover press-button to change the working mode of adapter.(data mode or command mode)

#### Indicator light:

The indicator light of adapter is red/green LED light, power state (red light), master/slave mode indicator (red light), connect condition indicator (green light).

When the RS232 adapter is powered, the power state indicator light (red light) is always bright.

If the master/slave mode instructor (red light) blinks every few seconds, it means the serial port adapter operates smoothly. We can judge this device is master device or slave device by looking the interval time of lights blinking. If blinking once every 3 seconds, it is slave device. If blinking once every 6 seconds, it is master device.

If the connect state indicator (green light) extinguishes, that means it has established connection with other Bluetooth devices. If blinking, it means not establish connection. When not connecting, we can judge whether it memorize the address (that is whether matches other Bluetooth device of not) or not through the green light's blinking speed. If blinking quickly (twice every second), it means it has

Chongqing Jinou Science & Technology Development Co., Ltd

remembered the address; if blinking slowly (once every second) , it does not remember. For master device, it blinks once every 3 seconds when query. When matching, it blinks quickly four times every second; when connecting, blink once every second; after connecting, the indicator light extinguishes.

When RS232 is working under the parameter setting condition, the master/slave indicator light and connecting state indicator light extinguish.

Mode switch button: In data model state, press Cmd button, the two working condition indicator light of the RS232 adapter extinguish. At this time RS232 adapter works under the parameter setting condition and returns "+ OPEN: 0" from serial port. In parameter setting condition, RS232 adapter stops working, and can only set the parameter RS232 adapter. In parameter settings state, press the Cmd button and RS232 adapter exit parameter condition, and begin to work. (searching, matching, connecting, sending data etc.); but cannot set RS232 adapter parameters. After powering, it enters data mode state default.

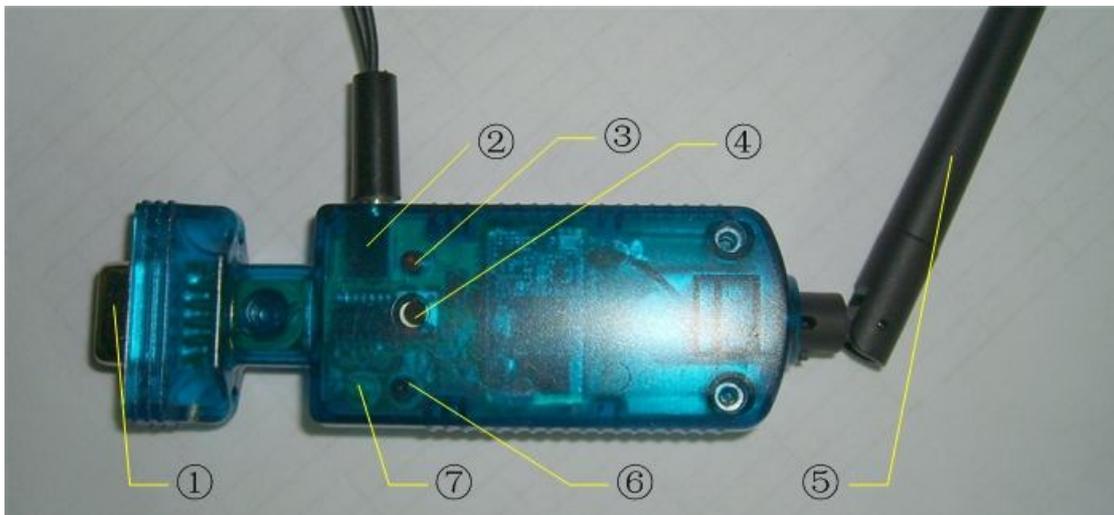


Figure 4 Class 2 Outside View


1. RS232 Connector
2. DC Power Connector
3. Power Indicator Light (red)
4. Mode Switch Button (CMD button)
5. External Antenna ( only Class 1)
6. Master/Slave Mode Indicator Light (red)
7. Connection Mode Indicator Light (green)

Notes:


There is no the item 5 in Class 2 type. The appearance and arrangement is the same as the Class 1.

## 5. Definition of DB9 Socket Pin

### Hole Pattern (Female) DB9

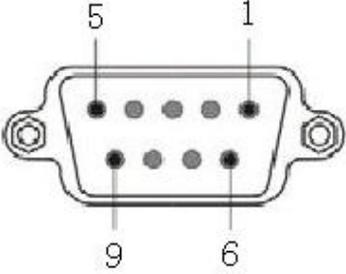 <p>DB9 Female</p>	Pin No	Signal
	1	VCC
	2	TXD
	3	RXD
	4	Nc
	5	GND
	6	Nc
	7	CTS
	8	RTS
	9	VCC

### Needle Pattern (Male) DB9

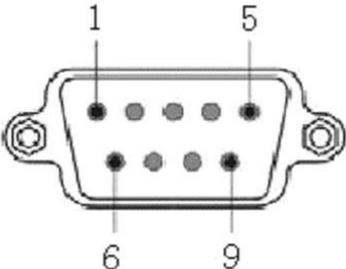 <p>DB9 Male</p>	Pin No	Signal
	1	VCC
	2	RXD
	3	TXD
	4	Nc
	5	GND
	6	Nc
	7	RTS
	8	CTS
	9	VCC

## 6. Description of Power Supply Condition


There are two ways of power supply. The power socket of adapter can provide power and when connect on PC we can use this way. The power adapter specification of RS232 adapter is 5~9VDC, 100mA rated current.




The second way is using DB9 seat to supply. It can be used on the device which developed by user. It can provide power only by plug in serial port.

DB9-1、DB9-9 VCC、DB9-5 GND, 5~9V 100mA rated current.

## 7. Description of Serial Interconnection

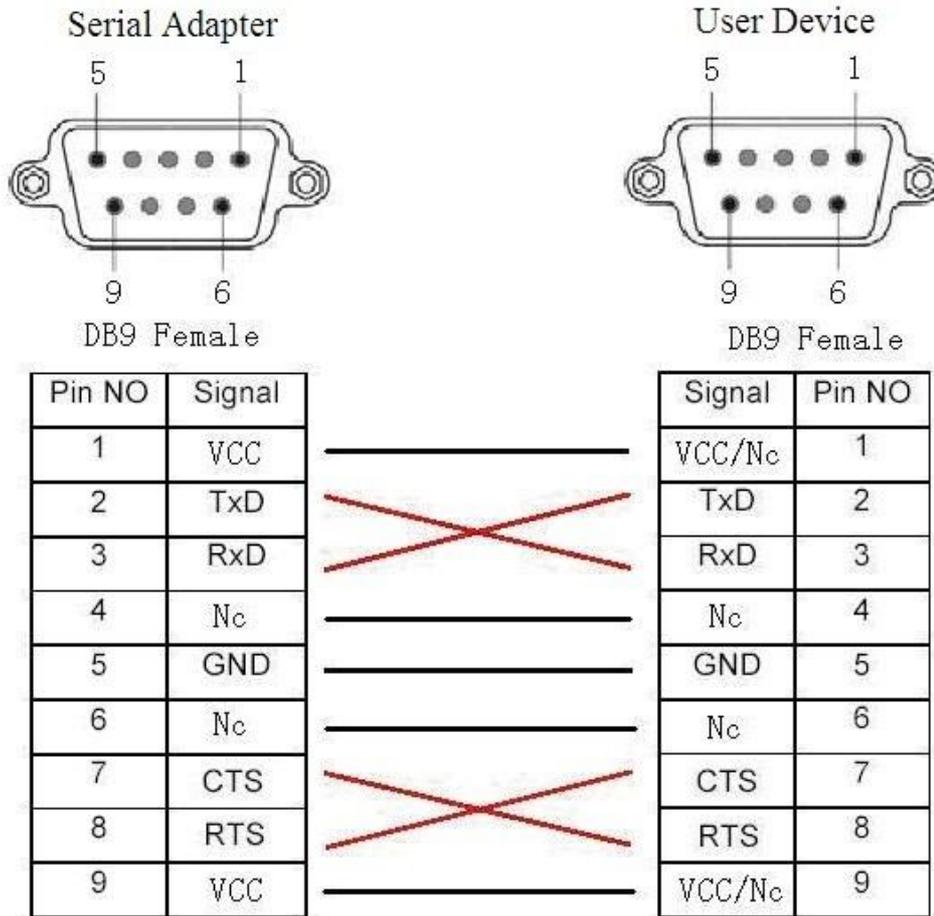

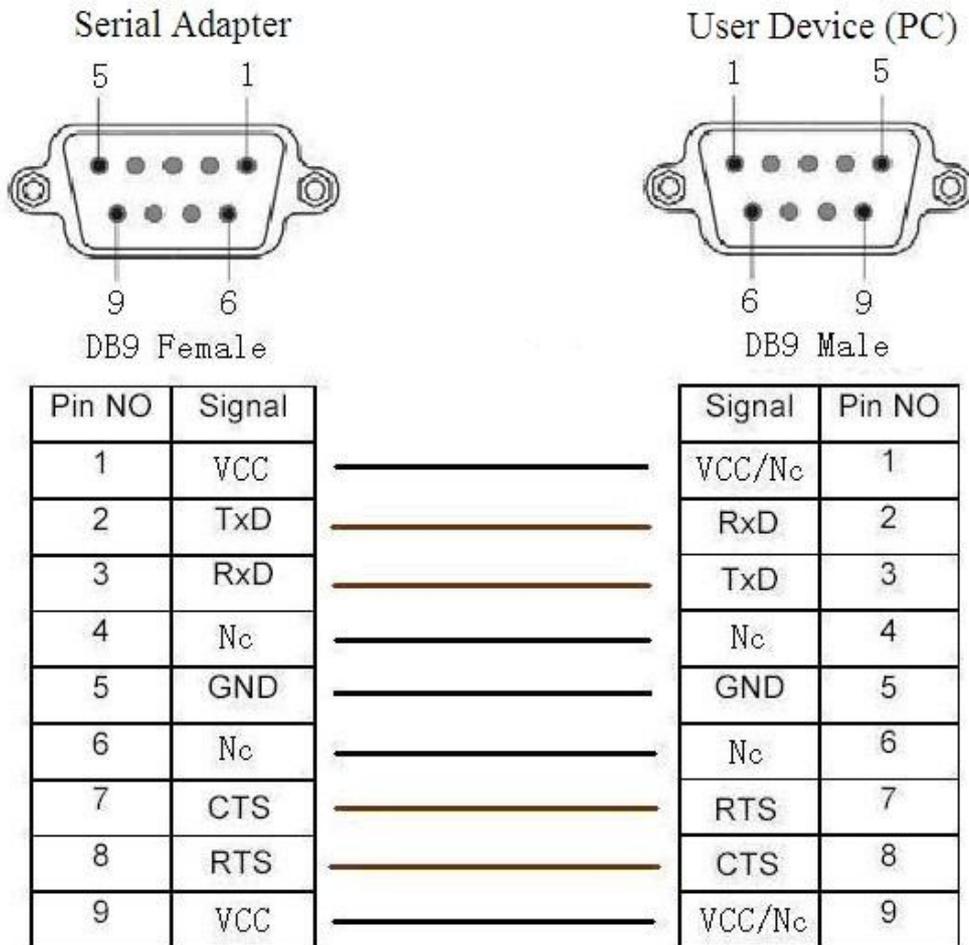

Notes: VCC/Nc says when use power sockets power-up, 1 and 9 pin is Nc. Using DB9 power-up, 1 and 9 pin connect VCC power supply.

## 8. Instructions

After powering on, the power indicator light of the device should bright immediately and the other indicator light is blinking separately.

After the factory, the default settings for the device are generally 9600bps ,8-N-1 communication mode and with flow control. It is a slave device and matching code is 1234.

If there is need to modify parameter, please press the switch button to make RS232 adapter enter into parameter setting mode. Then the two blinked state indicator light extinguished. Setting related parameter through AT command or parameter setting tools, such as by the following parameter: master/slave device, baud rate, authentication, bound address.

If communicate between two RS232 adapter, you must set one adapter as a master device and the other as a slave device. And you can identify the status according to the blinking state of the master/slave indicator.

Connecting several device need to enter command mode setting and the max memorized slave device number M (AT+ROLE= M\r\n). After returning data mode, it will automatically find and connect slave device around.

**Notes:** The parameter is saving in Bluetooth. Therefore, even blackout, the parameter will keep the same number as the last time and will not lose.

After modifying the parameter, please press the switch button again to make RS232 adapter enter into data model.

Starting under the data state, if the master device do not memorize address, it will firstly search the nearby Bluetooth device. If querying the Bluetooth device, the master device will enter matched state. If authentication passes, the master device will memorize (save) the address of this device and establish connection with this device. If memorized the address already, the master device connect the memorized device directly and will not query or match. The memorized address can be cleared by AT command and parameter setting tools.

The slave device wait for the other device's query and connect.


If two Bluetooth device connect successfully, connection indicator light (green light) extinguishes, and the master/slave mode instructions (red light) keep blinking. At this time, data can mutual communicate. For user device, it is like connecting with serial line and can receive data directly. Of course, for the mode of point to multi-point, the user need to structure data stream format by themselves to distinguish between some slave device.

What should be paid special attention is that the serial flow control pin (CTS, RTS) is default effective. If not cancel flow control and the flow control pin is not disposed by the user program, the data can not be transmitted or can only transmit one-way after connecting.

Once the device is connected, unless the signal is very bad to opposite side's Bluetooth disconnect automatically, our serial adapter will not disconnect automatically and the connection will always remain.

Notes: The FAQ section gives an important supplement to use equipment and the answers of the common problems that the customers may have. Please read carefully before using this section.

## 9. Configuration Tools

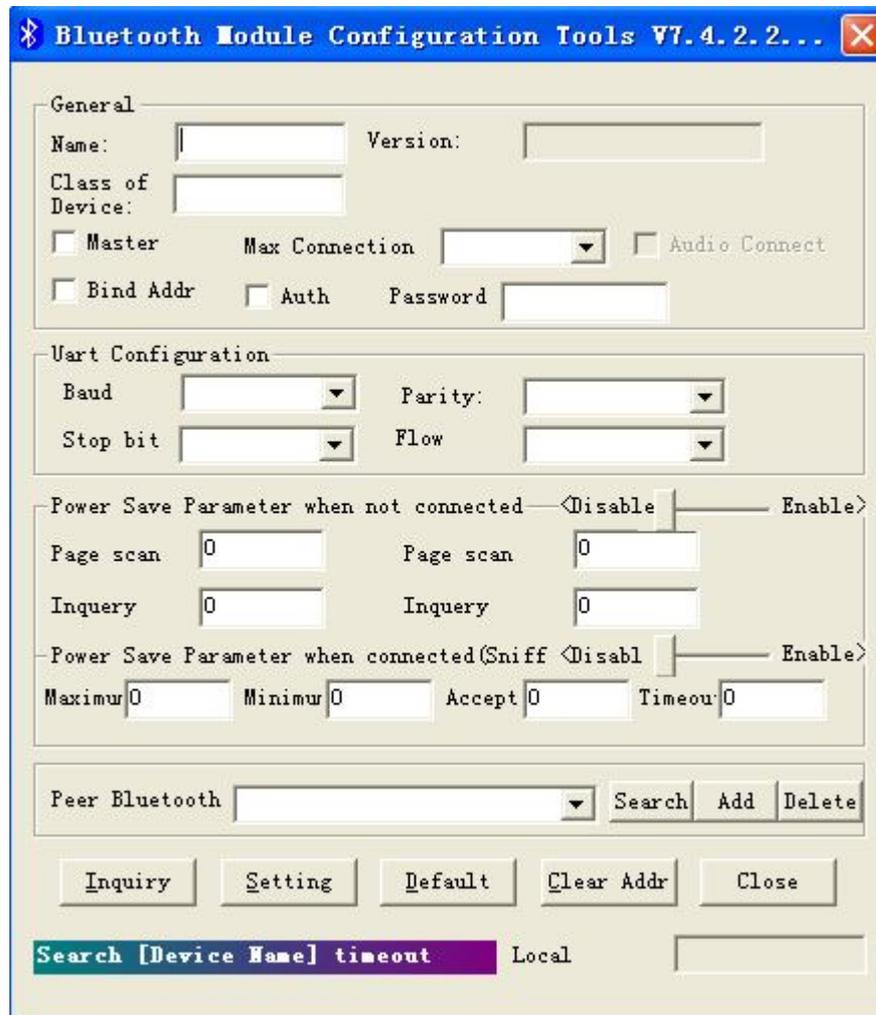


Notes: When using configuration tools, firstly please press Cmd button to make serial adapter enter into parameter setting mode, make sure the baseboard connect on PC port correctly and make sure the port not be occupied by other software. After setting the parameter, please press Cmd button again to make RS232 adapter enter into data mode and make the modified parameter effective.

Make the V4.25 version of the "Configuration Tools" as an example.

"Configuration Tools" includes start-up screen and the main interface. The main interface is shown as above.

## 9.1 Boot screen

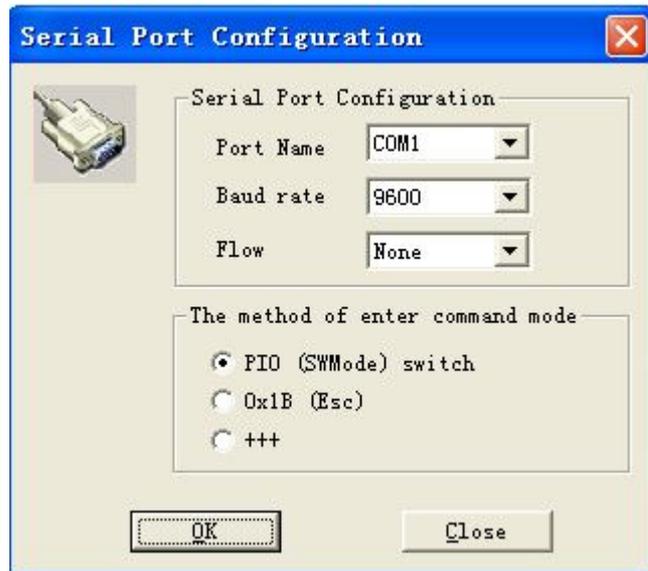

Open SetParam\_en.exe file, enter the start screen, and set the communication parameters of the serial adapter and the computer serial port


Port name

Select a port name of the computer and the serial adapter, such as COM1, COM2

Data flow control

Select flow control way

## 9.2 Basic Settings

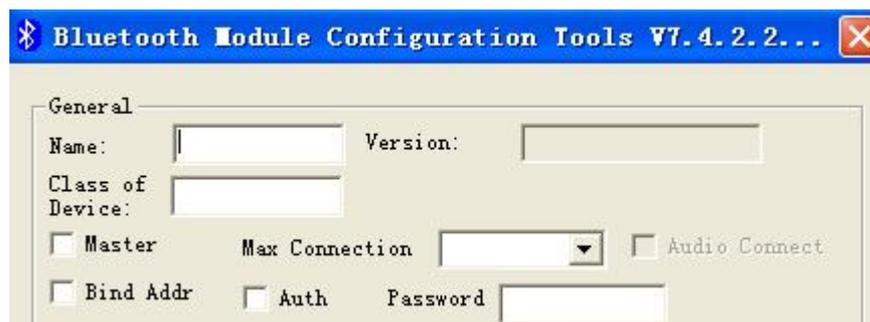

Device name

Set the serial adapter's name, and it only supports English name (not exceed 16 characters).

Firmware version

The current version of the serial adapter

Class of Device

The Class of the the master and slave devices must be the same, or the master device should use 0x000000 and the slave device can use arbitrary. Details are in the appendix. (Class of Device must be 6 characters)

#### The master device

Set the serial adapter as a master device, if not checked, was from the device. When both sides are using the serial adapter, you must call the shots is a device made from a device, which can be used as an alternative to RS232 cable.

#### Bind address

Whether you have bound the address of the other or not. Ticking(打钩) means that it can not connect with other devices after this matching & connection, but only limit the connection of this device . On the contrary, it is allowed to connect and match with any other devices.


#### Whether to use authentication and encryption

If selected, the other device must enter a password before connecting to authentication, and data transmission will be encrypted.

#### Password

Password used to authenticate. (No more than 6 characters)


## 9.3 Serial parameters

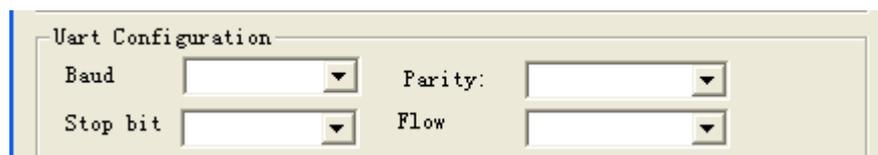

The image shows a software interface for 'Uart Configuration'. It features four dropdown menus arranged in a 2x2 grid. The top-left dropdown is labeled 'Baud', the top-right is 'Parity:', the bottom-left is 'Stop bit', and the bottom-right is 'Flow'. Each dropdown menu has a small downward-pointing arrow on its right side.

- Baud rate  
Set data communication baud rates of the module and equipment. This baud rate is the baud rate of the module.
- Parity  
Support for no parity, odd parity, even parity
- Stop bit  
Supports 1 stop bit, 2 stop bits

## 9.4 Energy-saving parameters and commands

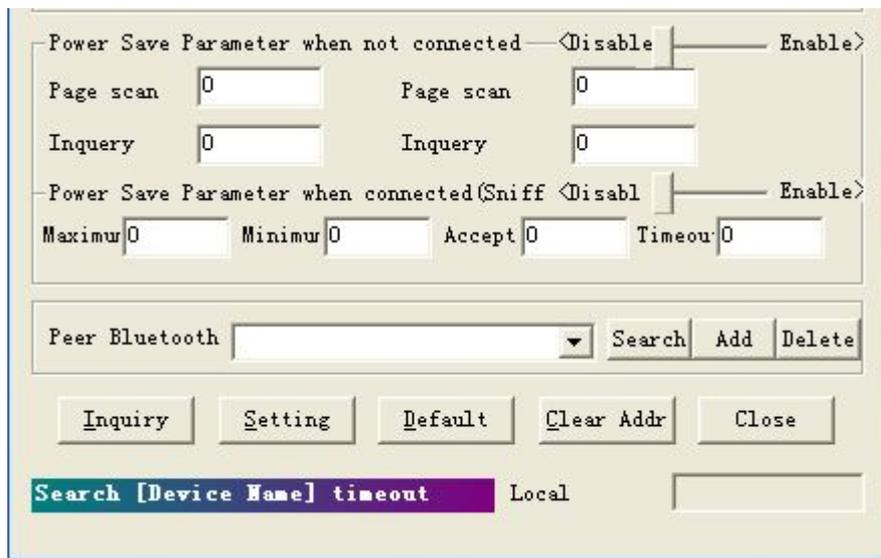

- Connection interval  
The interval of each time you connect and scan, that is how often to allow the connection. Interval time = setting value  $\times$  625us
- Connection lasts  
The duration of each time you connect and scan, that is the time you remain the connection state. Duration = setting value  $\times$  625us
- Note: The duration of connection can not be longer than the interval.
- Inquiry Interval  
The interval of each time you Inquire and scan, that is how often to allow queries. Interval time = setting value  $\times$  625us
- Inquiry lasts  
The duration of each time you Inquire and scan, that is the time you maintain the Inquiring & scanning state. Duration = setting value  $\times$  625us  
Note: The duration of Inquiring can not exceed the interval of Inquiring.
- Sniff energy parameters  
Sniff has four parameters: maximum, minimum, try, timeout. Parameter value = set value  $\times$  625us. When all the four parameters are 0, the sniff energy saving is forbidden, serial adapter run at full speed, the maximum data transmission speed is the highest, but power is high, and it is recommended to use when data is large. If allow to sniff energy, the serial adapter's power consumption will be reduced, and it is recommended to allow to sniff energy when the data is small, and it can reduce power consumption. such as: Maximum = 800, minimum = 80, try = 8, timeout = 8.
- Binding Bluetooth address  
Inquiry the Bluetooth device address which matches with the Bluetooth module
- Inquiry

Inquiry the current settings of the serial adapter.

- Set  
Set parameters to the serial adapter. However, it must be effective after the next start.
- Default  
Revert the serial adapter to the default setting. However, it must be effective after the next start.
- Clear the address  
Clear the address of the other Bluetooth device saved in the serial adapter. Once the serial adapter establish connection with a Bluetooth device, it will save its address. At next communication, the Bluetooth module can only communicate with this Bluetooth device and will not accept others' addresses. You can clear the Bluetooth address by this tool, so that you can communicate with other devices.

## 9.5 Set

After everything is ready, select the appropriate parameters from the connection setting dialog, such as communication port and flow control mode, and click the Connect button to establish a connection with the serial adapter.

When the connection is successful, the system will display the Inquired current setting parameters of the serial adapter on the screen.

If users need to modify some of these parameters such as baud rate, you can select the appropriate parameters, and after entering the appropriate values, click the Settings button to set. After setting, you can execute the Inquire command to check if the parameter settings are correct.

After setting parameters, you must press the toggle button to enter data mode, and then the serial adapter can be used regularly.

Note: Do not set the parameters often, or it will damage the chip.

Description: This RS232 serial adapter can be customized according to user requirements

## 10. AT command

Do not use "Configuration Tools" and the parameters of the RS232 adapter can also be Inquired / changed when send the AT command with serial port directly.

Note:

Being the same as using Configuration Tools, it can be allowed to perform parameter setting command only when the serial adapter working under the "parameter setting

state" (that is press Cmd button to enter). When Parameters are modified, you should make the serial adapter return to the data model, and then parameter settings take effect.

Each command must make the two bytes (\r\n) carriage return and line feed ((ASCII codes are 0x0D, 0x0A) as the end sign, or command can not be identified

The brackets "<" outside of the parameter is added for convenient reading and the actual command is without the "<"

## 1 Test command

command	response	parameter
AT\r\n	\r\nOK\r\n	No

## 2 Set / Inquire the baud rate

command	response	parameter
AT+BAUD=<rate>\r\n	\r\nOK\r\n	rate: Baud Rate (1200、2400、4800、9600、19200、38400、57600、115200、230400、460800、921600、1382400)  Default: 9600
AT+BAUD?\r\n	\r\nOK\r\n\r\n+BAUD: <rate>\r\n	

Note: This parameter is only valid for the Bluetooth data communication. The baud rate used to set the parameters is always 9600bps and does not change. The high the baud rate is, the more power consumption the system uses up.

## 3. Set / Inquire the serial communication mode

command	response	parameter
AT+UARTMODE=<stopbit>,<paritybit>\r\n	\r\nOK\r\n	<stopbit>: Stop bit 0: 1 stop bit 1: 2 stop bits <paritybit>paritybit 0: No parity 1: Odd parity 2: Even Parity

		Default: 0, 0
--	--	---------------

#### 4. Set / Inquire Serial Response time

command	response	parameter
AT+RESPTIME=<time>\r\n	\r\nOK\r\n	time : Response time (1~200(ms))
AT+RESPTIME?\r\n	\r\n OK\r\n \r\n+RESPTIME: <time>\r\n	Default: 100

Notes: Response time only affect the transmission speed of discrete data, and will not affect large continuous data. When the response time is less than 50ms, it will influence the power consumption of the system.

#### 5. Set / Inquire authentication password

Command	Response	Parameter
AT+PASSWORD=<password>\r\n	\r\n OK\r\n	password: Default: 1234
AT+PASSWORD?\r\n	\r\n OK\r\n \r\n+PASSWORD:<password>\r\n	(No more than 6 bytes)

#### 6.Set/Inquire Name

Command	Response	Parameter
AT+NAME=<name>\r\n	\r\n OK\r\n	name: setting name
AT+NAME?\r\n	\r\n OK\r\n \r\n+NAME: <name>\r\n	Default : definition according to the specification of products (when modifying, no more than 16 bytes.)

## 7. Set / Inquire Sniff power-saving mode

Command	Response	Parameter
AT+SNIFF=<max>,<min>,<attemp>,<timeout>\r\n	\r\n OK\r\n	max: max time min: min time
AT+SNIFF?\r\n	\r\n OK\r\n \r\n+SNIFF: <max>,<min>,<attemp>,<timeout>\r\n	attemp: attemp time timeout: timeout time Default : 200,32,1,8 (Decimalism)

Notes: This parameter will affect the power consumption of system.

## 8 Set / Inquire the parameters of Inquiring scan and connecting

### scan

command	response	parameter
AT+SCANTIME=<pageint>,<pagewin>,<inqint>,<inqwin>\r\n	\r\n OK\r\n	pageint : Connection interval pagewin : Duration of connection
AT+SCANTIME?\r\n	\r\n OK\r\n \r\n+SCANTIME:<pageint>,<pagewin>,<inqint>,<inqwin>\r\n	inqint : Inquire interval inqwin : Inquire duration Default : 2048, 18, 2048, 18 (Decimal)

<pageint>: Connect scan interval (Range: 18~4096)

<pagewin>: Connect scan duration (Range: 17~4096)

<inqint>: Inquiry scan interval (Range: 18~4096)

<inqwin>: Inquiry scan duration (Range: 17~4096)

<pageint> must longer than <pagewin>; <inqint> must longer than <inqwin>

This parameter will affect the system power consumption

## 9 Set / Inquire whether authenticate

command	response	parameter
AT+AUTH=<enable>\r\n	\r\n OK\r\n	enable : 0 doesn't need authentication, or needs authentication
AT+AUTH?\r\n	\r\n OK\r\n \r\n+AUTH: <enable>\r\n	

Authentication: the security authentication is provided by the module. Only the authenticated users can communicate with it. If it is a pair of modules, these processes are done automatically. (Default password: 1234)

## 10 Set / Inquire the type of the device

Command	Response	Parameter
AT+CLASS=<cod>\r\n	\r\n OK\r\n	cod : device type ( The length must be 6 bytes. ) Default: 000000
AT+CLASS?\r\n	\r\n OK\r\n \r\n+CLASS: <cod>\r\n	

## 11 Set / Inquire the role of the device

Command	Response	Parameter
AT+ROLE=<master>\r\n	\r\n OK\r\n	master: (0~7) 0 stands for slave device. Others: the device number of automatically connection Default: slave device
AT+ROLE?\r\n	\r\n OK\r\n \r\n+ROLE: <master>\r\n	

## 12 Set / Inquire low-power mode

command	response	parameter
AT+LOWPower=<enable>\r\n	\r\n OK\r\n	<enable>: 0 : Does not support low power
AT+LOWPower?\r\n	\r\n OK\r\n \r\n+LOWPower: <enable>\r\n	

		1: support low power Default: 0
--	--	------------------------------------

### 13 Set / Inquire the data processing mode when not connected

command	response	parameter
AT+DATAMODE=<mode>\r\n	\r\n OK\r\n	<mode>:
AT+DATAMODE?\r\n	\r\n OK\r\n \r\n+DATAMODE: <mode>\r\n	0: The data is stored in the buffer until the connection is established and sent to the other Bluetooth device 1: When not connected, the data received will lost directly Default: 0

### 14 Set / Inquire flow control mode

Command	Response	Parameter
AT+FLOWCONTROL=<type>\r\n	\r\n OK\r\n	<type>:
AT+FLOWCONTROL?\r\n	\r\n OK\r\n \r\n + FLOWCONTROL : <type>\r\n	0: no flow control 1: adapt hardware flow control Default: 1

### 15 Set / Inquire the type of data device

Command	Response	Parameter
AT+DEVTYPE=<type>\r\n	\r\n OK\r\n	<type>:
AT+DEVTYPE?\r\n	\r\n OK\r\n \r\n+DEVTYPE: <type>\r\n	0: NONE 1: DCE 2: DTE Default: 0

## 16 Set/Inquire the type of connect service of the device

Command	Response	Parameter
AT+CONNTYPE=<type>\r\n	\r\n OK\r\n	<type>: 0: L2CAP 1: RFCOMM
AT+CONNTYPE?\r\n	\r\n OK\r\n \r\n+CONNTYPE: <type>\r\n	Default : RFCOMM

## 17 Set/Inquire fixed service port in SPP connection

Command	Response	Parameter
AT+FIXSCN=<enable>\r\n	\r\n OK\r\n	<enable>: 0 : unfixed port
AT+FIXSCN?\r\n	\r\n OK\r\n \r\n+FIXSCN: <enable>\r\n	1: fix port Default: 0

## 18 Set / Inquire the indicator

command	response	parameter
AT+LED=<state>,<power>\r\n	\r\n OK\r\n	state: the PIO port of the“connection indicate” power: the PIO port of the“power indicate”
AT+LED?\r\n	\r\n OK\r\n \r\n + LED : <state>,<power>\r\n	Default: 0, 1

The IO ports of various types of products are different. If you want to use this command to modify the IO port of the indicator, please contact us. This product has no more IO for users so there is no need to change this parameter.

## 19 Set / Inquire whether it is bound

command	response	parameter
AT+BIND=<enable>\r\n	\r\n OK\r\n	enable: 0 doesn't bind the address or the address has been bound.
AT+BIND?\r\n	\r\n OK\r\n \r\n+BIND: <enable>\r\n	Default: not bind the address

When binding the address: For the slave device, if it has memorized the address, it is not allowed to be queried and matched and can be connected only by its memory devices; For the master device, if it has memorized the address, then it is trying to connect to the memorized device. When binding the address, once the device memorizes the address, the connection can only be established between the memorized device and itself, and not to establish a connection with other devices. Therefore, when binding the address, if you want to establish a connection with other devices, you must clear the memorized address.

When not binding the address: the slave device can be queried and matched; the master device will clear the memorized addressed automatically and re-Inquire and match new equipments after failing to connect with the memorized device that up to a certain number.

So, if you want to connect the permanent equipment, you'd better bind the address.

## 20 Set/Inquire the memorized remote Bluetooth device

Command	Response	Parameter
AT+RADDR=<addr>\r\n AT+RADDR=<addr>,<scn>\r\n	\r\n OK\r\n	index : record index addr : the remote Bluetooth address
AT+RADDR?\r\n	\r\n OK\r\n \r\n+RADDR:<index>,<addr>,<scn>\r\n	scn : the connected remote device service channel number, 0 means not connect or not set.

When using this command to set the Bluetooth address of other side, the Bluetooth module as master device will keep trying to connect the address till succeed unless by press button or clear address command to clear the address. If the Bluetooth module, as slave device, do not bind the address, it still can be connected by other master devices. If binding the address, it can set the binding address by this command.

## 21 Clear the memorized addressed

Command	Response	Parameter
---------	----------	-----------

AT+CLEARADDR\r\n	\r\n OK\r\n	no
------------------	-------------	----

Memorized address: After two serial adapter match successfully, they will memorize the other side's Bluetooth address.

## 22 Inquire the local Bluetooth address

Command	Response	Parameter
AT+LADDR?\r\n	\r\n OK\r\n \r\n +LADDR: <addr>\r\n	addr: the local Bluetooth address

Notes: When using address setting command, the pattern must be the same as the queried local or remote Bluetooth address.

## 23 Inquire the program version

Command	Response	Parameter
AT+VERSION?\r\n	\r\n OK\r\n \r\n + VERSION : <Para1>\r\n	Para1: the program version

## 24 Software reset

Command	Response	Parameter
AT+RESTART\r\n	\r\n OK\r\n	

After sending this command, the serial adapter's program will reset and do not need to outage to reset.

## 25 Inquire the remote Bluetooth devices

command	response	parameter
AT+INQ\r\n	\r\n OK\r\n \r\n +INQRESU : <addr>,<class>,<name>\r\n Inquire Results \r\n +INQCOMP\r\n Inquire complete	<addr>:Bluetooth address <name> : Device name

## 26 Initiatively match the remote Bluetooth device

Command	Response	Parameter
AT+PAIR=addr\r\n	\r\n OK\r\n \r\n +PAIR : <addr>,<status>\r\n Inquiry result	<addr> : Bluetooth address <status>: match status (0)

		means success and other means fail);
--	--	--------------------------------------

## 27 Inquire the remote Bluetooth device's RFCOMM service

Command	Response	Parameter
AT+SERVICE=addr\r\n	\r\n OK\r\n \r\n+SVCRESU : <scn>,<name>\r\n Inquire Results \r\n+SVCCMP\r\n Inquire complete	<addr> : Bluetooth address <scn>: service channel number <name>:service name

## 28 Cancel to Inquire remote Bluetooth devices

Command	Response	Parameter
AT+CANCEL\r\n	\r\n OK\r\n	

## 29 Restore default settings

Command	Response	Parameter
AT+RESET\r\n	\r\n OK\r\n	No

## 30 Inquire all the commands

Command	Response	Parameter
ATZ?\r\n	\r\n OK\r\n Show all command	List all the command

# 11. FAQ:

## 1 After powering the module, the indicator of the Module doesn't blink.

Check whether the power supply is correct. The correct power is positive inside and

negative outside, from 6-9V. And the power is 100mA. If the power is supplied by DB9, the user needs to connect 1 or 9 pin to VCC and 5 pin to GND.

## **2 When there are multiple Bluetooth devices around, how to connect to the specified Bluetooth device?**

Send AT+INQ command, and get the information of the Bluetooth device around  
Find the specified Bluetooth address according to the device name of INQRESU  
Send AT+RADDR=addr and memorized the information of the device  
Send AT+BIND=1 command, and bind this device  
Send AT+ROLE=1, and set it as a single-point master device;  
Sending AT+EXIT pushing command setting mode, the serial adapter will connect appointed Bluetooth device initiatively.

## **3 How to operate if want to connect with multiply devices at the same time?**

The steps are about the same of the previous question, however:  
Memorize multiply device information through the “AT+RADDR=addr” command;  
Send AT+ROLE command to set the needed connected device number.  
Send AT+EXIT pushing command setting mode, the serial adapter will connect appointed Bluetooth device initiatively.

## **4 How the multipoint connections send and receive data? And what are the differences between the sending & receiving of multipoint and point-to-point connections?**

The point to point sending and receiving data has no distinction of master device and slave device. But the multipoint connection has the distinction of master device and slave device. Each slave device can receive the data from a master device, but when send data from a slave device, only the master devices can receive it and other slave devices can not receive this data. If multiply slave devices send data to the master device at the same time, the data sending from the serial port of the master device is intertwined and can not distinguish which device it was sent from.

## **5 Can not set the parameters, or use the Configuration Tools displaying "connection timeout" when connects to the PC**

First, make sure if the indicator of the module in the data mode is blinking, and blinking means that the module works properly;

Make the module enter into the parameter setting mode. At this time, all of the indicators extinguish except for the power indicator;

Whether the serial port number of the setting tool (the Configuration Tools which JS&T provides) is the serial port you are using;

If use the serial line to connect with the PC, make sure whether the connection line is correct. Check the connection instruction of the serial port to learn about the connection method.

## **6 How to send AT command by your hand?**

For most AT commands are not given in the Configuration Tools, it can only send through entering commands by hand when necessary. The steps are as follows:

Select a serial communication software (such as HyperTerminal or serial debugging assistant) to open the linked serial port. The serial port parameters under the parameter setting state are always configured to 9600bps and 8-N-1, and they have nothing to do with the serial parameters of the data communication which the AT command set.

Press the toggle key to make the device enter into the parameter setting state. The blinking indicator extinguishes and the serial port should receive "+ OPEN: x\r\n ", and "x" as the current number of the memorized devices. Then you can send commands. What need to be noted is that all commands are end with CRLF ""\r\n ". All the commands will return "\r\nOK\r\n " to response after sending and receiving correctly. If returns "\r\nERROR\r\n " , please check whether the sending is correct. For example: sending a test command AT\r\n should send the 4 bytes 'A'T'\r\n'. The Bluetooth returns "\r\nOK\r\n" after receiving properly.

## **7 Two serial adapter can not connect with each other**

Use Configuration Tools to inquiry and confirm whether one of the 2 modules is a Master device, the other one is a Slave device; whether the passwords and Category Codes of the two modules are the same, and if they are not, you should use the Configuration Tools to modify them into a same value.

Whether the master device has memorize other module's address. If it is, please remove it. Besides, please check whether there are other Bluetooth setting or not. If

Whether the module has set the Bind Address option and connected with other devices. If it is, please remove the Match Setting addresses first. Because, for the Slave device, it is not allowed to be inquired and matched and only can be connected with its memorized devices if it has memorized the address; for the Master device, it will try to connect with its memorized devices all the time if it has memorized the addresses.

## **8 Why PC, USB Dongle can not find the serial adapter?**

Firstly, ensure whether the serial adapter be set as a Slave device. For the serial adapter, the master device can not be found by other devices.

Whether the adapter has set the Bind Address option and connected with other devices. If it is, please remove the Match Setting addresses first. Because, for the Slave device, it is not allowed to be inquired and matched and only can be connected with its memorized devices if it has memorized the address.

## **9 Why PC USB Dongle and serial adapter can not realize data communication or only communicate by one-way data communication?**

First, make sure whether the two devices establish a connection, judging by looking at whether the Link indicator of the Bluetooth extinguish;

Check whether the serial cable connection is correct

Whether the serial port of the using serial adapter's application program of the using the serial port is the same of the serial port parameter of the adapter's configuration. If the serial adapter has set the flow control, PC-side application should be selected for hardware flow control or CTS / RTS flow control; if connect to MCU, MCU should also process CTS and RTS pin in accordance with the RS232 protocol.

If determines not to use flow control, use " AT+FLOWCONTROL\r\n " command to cancel it.

If communicates large amounts of data with high-speed, it is strongly recommended to use flow control function, or it may cause data loss or a adapter reset.

## **10 How to communicate with PDA?**

Firstly you need to set parameter of PDA and adapter and to make sure it must be the

mode of one master and one slave. What need to be paid attention is the port setting of PDA. Taking WIN CE as a example, Bluetooth serial port settings are divided into the two serial ports: push and pop, if the module connects with the mobile phone as a master device initiatively, use the push port; If the module is connected by the mobile phone as a slave device initiatively, then use the pop port.

## **11 How to communicate with Bluetooth mobile phone?**

The general Bluetooth mobile phone can not connect the serial service of other Bluetooth devices initiatively because they do not have serial service menu which can connect serial port. If the user want to realize serial port connect between Bluetooth mobile phone and adapter, they can set adapter as master device and connect Bluetooth mobile phone initiatively. But if need data communicate with adapter module, the user need to write by themselves generally or ask for serial communication software, which can be used on mobile phone, from mobile phone producer.

## **12. Used together with WIFI equipment**

As WIFI is using the same frequency channel signal with Bluetooth, what's more, it is the mode of fixed frequency without hopping mechanism. So using together with WIFI at short range will influence the WIFI but the Bluetooth have the function of frequency modulation itself. Therefore the influence to Bluetooth caused by WIFI is quite small.


## **12. Appendix**

### **12.1 Equipment Type Number**

The Class of Device/Service (CoD) field has a variable format. The format is indicated using the 'Format Type field' within the CoD. The length of the Format Type field is variable and ends with two bits different from '11'. The version field starts at the least significant bit of the CoD and may extend upwards.

In the 'format #1' of the CoD (Format Type field = 00), 11 bits are assigned as a bit-mask (multiple bits can be set) each bit corresponding to a high level generic category of service class. Currently 7 categories are defined. These are primarily of a 'public service' nature. The remaining 11 bits are used to indicate device type category and other device-specific characteristics.

Any reserved but otherwise unassigned bits, such as in the Major Service Class field, should be set to 0.

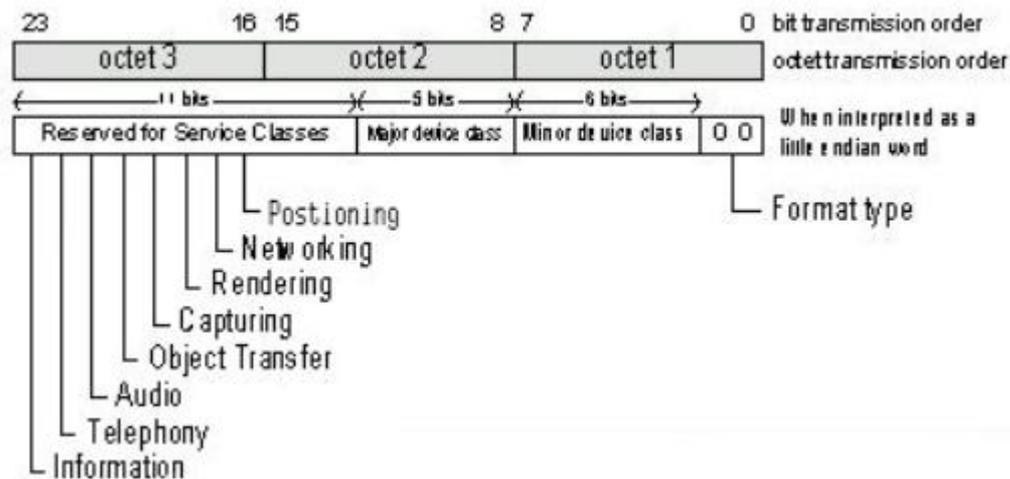

Any reserved but otherwise unassigned bits, such as in the Major Service Class field, should be set to 0.

Figure 1.2: The Class of Device/Service field (first format type). Please note the order in which the octets are sent on the air and stored in memory. Bit number 0 is sent first on the air.

## 12.2 MAJOR SERVICE CLASSES

Bit no	Major Service Class
13	Limited Discoverable Mode [Ref #1]
14	(reserved)
15	(reserved)
16	Positioning (Location identification)
17	Networking (LAN, Ad hoc, ...)
18	Rendering (Printing, Speaker, ...)
19	Capturing (Scanner, Microphone, ...)
20	Object Transfer (v-Inbox, v-Folder, ...)
21	Audio (Speaker, Microphone, Headset service, ...)
22	Telephony (Cordless telephony, Modem, Headset service, ...)
23	Information (WEB-server, WAP-server, ...)

TABLE 1.2: MAJOR SERVICE CLASSES  
[Ref #1 As defined in See Generic Access Profile, Bluetooth SIG]

## 12.3 MAJOR DEVICE CLASSES

The Major Class segment is the highest level of granularity for defining a Bluetooth Device. The main function of a device is used to determine the major class grouping. There are 32 different possible major classes. The assignment of this Major Class field is defined in Table 1.3.

12	11	10	9	8	Major Device Class
0	0	0	0	0	Miscellaneous [Ref #2]

0	0	0	0	1	Computer (desktop, notebook, PDA, organizers, .... )
0	0	0	1	0	Phone (cellular, cordless, payphone, modem, ...)
0	0	0	1	1	LAN /Network Access point
0	0	1	0	0	Audio/Video (headset, speaker, stereo, video display, vcr.....)
0	0	1	0	1	Peripheral (mouse, joystick, keyboards, .... )
0	0	1	1	0	Imaging (printing, scanner, camera, display, ...)
1	1	1	1	1	Uncategorized, specific device code not specified
X	X	X	X	X	All other values reserved

TABLE 1.3: MAJOR DEVICE CLASSES

[Ref #2: Used where a more specific Major Device Class code is not suited (but only as specified in this document). Devices that do not have a major class code assigned can use the all-1 code until 'classified']

## 12.4 THE MINOR DEVICE CLASS FIELD

The 'Minor Device Class field' (bits 7 to 2 in the CoD), are to be interpreted only in the context of the Major Device Class (but independent of the Service Class field). Thus the meaning of the bits may change, depending on the value of the 'Major Device Class field'. When the Minor Device Class field indicates a device class, then the primary device class should be reported, e.g. a cellular phone that can also work as a cordless handset should use 'Cellular' in the minor device class field.

## 12.5 MINOR DEVICE CLASS FIELD - COMPUTER MAJOR CLASS

7	6	5	4	3	2	Minor Device Class bit no of CoD
0	0	0	0	0	0	Uncategorized, code for device not assigned
0	0	0	0	0	1	Desktop workstation
0	0	0	0	1	0	Server-class computer
0	0	0	0	1	1	Laptop
0	0	0	1	0	0	Handheld PC/PDA (clam shell)
0	0	0	1	0	1	Palm sized PC/PDA
0	0	0	1	1	0	Wearable computer (Watch sized)
X	X	X	X	X	X	All other values reserved

TABLE 1.4: SUB DEVICE CLASS FIELD FOR THE 'COMPUTER' MAJOR CLASS

## 12.6 MINOR DEVICE CLASS FIELD - PHONE MAJOR CLASS

### CLASS

Minor Device Class						
7	6	5	4	3	2	bit no of CoD
0	0	0	0	0	0	Uncategorized, code for device not assigned
0	0	0	0	0	1	Cellular
0	0	0	0	1	0	Cordless
0	0	0	0	1	1	Smart phone
0	0	0	1	0	0	Wired modem or voice gateway
0	0	0	1	0	1	Common ISDN Access
0	0	0	1	1	0	Sim Card Reader
X	X	X	X	X	X	All other values reserved

TABLE 1.5: SUB DEVICE CLASSES FOR THE 'PHONE' MAJOR CLASS

## 12.7 MINOR DEVICE CLASS FIELD - LAN/NETWORK ACCESS POINT MAJOR CLASS

Minor Device Class			
7	6	5	bit no of CoD
0	0	0	Fully available
0	0	1	1 - 17% utilized
0	1	0	17 - 33% utilized
0	1	1	33 - 50% utilized
1	0	0	50 - 67% utilized
1	0	1	67 - 83% utilized
1	1	0	83 - 99% utilized
1	1	1	No service available [REF #3]
X	X	X	All other values reserved

TABLE 1.6: THE LAN/NETWORK ACCESS POINT LOAD FACTOR FIELD

[Ref #3: "Device is fully utilized and cannot accept additional connections at this time, please retry later"]

The exact loading formula is not standardized. It is up to each LAN/Network Access Point implementation to determine what internal conditions to report as a utilization percentage. The only requirement is that the number reflects an ever-increasing utilization of communication resources within the box. As a recommendation, a client that locates multiple LAN/Network Access Points should attempt to connect to the one reporting the lowest load.

Minor Device Class			
4	3	2	bit no of CoD
0	0	0	Uncategorized (use this value if no other apply)
X	X	X	All other values reserved

TABLE 1.7: RESERVED SUB-FIELD FOR THE LAN/NETWORK ACCESS POINT

## 12.8 MINOR DEVICE CLASS FIELD - AUDIO/VIDEO

### MAJOR CLASS

Minor Device Class						
7	6	5	4	3	2	bit no of CoD
0	0	0	0	0	0	Uncategorized, code not assigned
0	0	0	0	0	1	Device conforms to the Headset profile
0	0	0	0	1	0	Hands-free
0	0	0	0	1	1	(Reserved)
0	0	0	1	0	0	Microphone
0	0	0	1	0	1	Loudspeaker
0	0	0	1	1	0	Headphones
0	0	0	1	1	1	Portable Audio
0	0	1	0	0	0	Car audio
0	0	1	0	0	1	Set-top box
0	0	1	0	1	0	HiFi Audio Device
0	0	1	0	1	1	VCR
0	0	1	1	0	0	Video Camera
0	0	1	1	0	1	Camcorder
0	0	1	1	1	0	Video Monitor
0	0	1	1	1	1	Video Display and Loudspeaker
0	1	0	0	0	0	Video Conferencing
0	1	0	0	0	1	(Reserved)
0	1	0	0	1	0	Gaming/Toy [Ref #4]
X	X	X	X	X	X	All other values reserved

[Ref #4: Only to be used with a Gaming/Toy device that makes audio/video capabilities available via Bluetooth]

TABLE 1.8: SUB DEVICE CLASSES FOR THE 'AUDIO/VIDEO' MAJOR CLASS

## 12.9 MINOR DEVICE CLASS FIELD - PERIPHERAL

### MAJOR CLASS

Minor Device Class	
7	6
0	1
0	0
1	0
1	1
X	X

TABLE 1.9: THE PERIPHERAL MAJOR CLASS KEYBOARD/POINTING DEVICE FIELD

Bits 6 and 7 independently specify mouse, keyboard or combo mouse/keyboard devices. These may be combined with the lower bits in a multifunctional device.

Minor Device Class			
5	4	3	2
0	0	0	0
0	0	0	1
0	0	1	0
0	0	1	1
0	1	0	0
0	1	0	1
X	X	X	X

TABLE 1.10: RESERVED SUB-FIELD FOR THE DEVICE TYPE

## 12.10 MINOR DEVICE CLASS FIELD - IMAGING

### MAJOR CLASS

Minor Device Class			
7	6	5	4
X	X	X	1
X	X	1	X
X	1	X	X
1	X	X	X
X	X	X	X

TABLE 1.11: THE IMAGING MAJOR CLASS BITS 4 TO 7

Bits 4 to 7 independently specify display, camera, scanner or printer. These may be combined in a multifunctional device.

Minor Device Class	
3	2
X	X

0 0 Uncategorized, default

X X All other values reserved

TABLE 1.12: THE IMAGING MAJOR CLASS BITS 2 AND 3

Bits 2 and 3 are reserved

Example:

PC: 0x120104

NOTEBOOK: 0x12010C

Headphones: 0x200404

## Chongqing Jinou Science & Technology Development Co., Ltd.

Add: 12-2-1-1, Huaxuan Branch Road 108#, Yuzhou Road, Jiulongpo District,  
Chongqing, 400041, China.

Tel: 86-23-68903066/68842136

Fax: 86-23-68644164

E-mail: [info@oemblue.com](mailto:info@oemblue.com) [lauren@oemblue.com](mailto:lauren@oemblue.com)

[jinou-lisa@foxmail.com](mailto:jinou-lisa@foxmail.com) [whf@jinoux.com](mailto:whf@jinoux.com)

Web: [www.jinoux.com](http://www.jinoux.com) [www.oemblue.com](http://www.oemblue.com)